

OPERATING & SAFETY GUIDE

This appliance is only for professional use by a qualified operator



Soup Kettle
Product Code B501107
230v 400w 3amp

A full copy of the EHA Code of Practice regarding the safe hire of Electrical Equipment is available on request

GENERAL SAFETY ADVICE

Mines Leisure Hire will have prepared, checked and delivered this appliance to you in accordance with the Event Hire Association (EHA) Code of Practice for Electrical Testing.

Electrical equipment is required to be properly maintained so as to prevent danger to the user.

It is our policy to inspect every electrical appliance before re-hire. This is done by an electrically qualified person trained in PAT Testing. This combined inspection and test includes:

- Visual Inspection
- Earth continuity tests (for Class I equipment)
- Insulation resistance testing (which can be replaced with protective conductor/touch current measurement)
- Flash Testing (or Hi-Pot testing)
- No load (run) test
- Polarity check (extension or detachable lead sets only), and
- Functional tests

The results of each test are recorded and are kept as records for future inspection.

OPERATING INSTRUCTIONS

1. Slot the lid on top of the appliance.
2. Attach labels—Slide the relevant label into the magnetic label holder. Attach the holder to the side of the appliance.
3. Connect the appliance to the mains power supply.
4. Fill the outer container with approximately 600ml of water.
5. Carefully place the inner container into the appliance.
6. Fill the inner container with hot soup and close the lid.
7. Set the temperature control. The temperature ranges from 1 (lowest) to 12 (highest).
8. The Power light will come on and the kettle will begin to heat up.
9. Reduce the temperature to maintain heat levels. To maintain temperature, we recommend the lowest heat setting possible.
10. Use a suitable implement to remove the contents of the kettle. **DO NOT** tip the kettle to remove the contents.
11. To turn the appliance Off, set the Temperature Control to '0'.

CLEANING

- Always turn off and disconnect the appliance from the power supply before cleaning.
 - Clean any spilt food on the appliance immediately.
 - Use soapy water and a damp cloth to clean the exterior of the appliance.
 - The inner container and lid are machine washable.
 - Dry thoroughly after cleaning.
- Note: The lid is hinged in the middle. Lift one half of the lid to access the container.

SAFE USE

The safe use of hire equipment is the sole responsibility for the hirer once the items are collected or arrive on site.

Mines Leisure Hire staff are not allowed to install equipment on site, and you are not permitted to make any alterations to the appliance or its connectors in any way.

If in any doubt please ask a Mines Leisure Hire advisor for advice on 01225 812059 or a qualified electrician.

- Never use the equipment in a poorly ventilated space or near combustible materials.
- Keep all children, animals and bystanders away from the appliances whilst in operation.
- Ensure the floor of the work area is flat, free from trip hazards and non-slip.
- Keep a bucket of water nearby to treat burns.
- Use CO₂ extinguisher to hand in case of and emergency.
- Wear suitable protective clothing, such as an apron, overall and hat. Use kitchen gloves for handling utensils to protect from burns.
- **Allow the appliance to cool fully before touching or cleaning.**